

### Flexible Button Programming

1. Press the [TRANS/PGM] button.
2. Press the flexible button to be programmed.
3. Enter the desired feature code from the following table.
4. Press the [HOLD/SAVE] button to save.

The following Numbering Plan code can be changed in PGM 104-107, 109 depending on the user's needs.

<b>Numbering plan is applicable to both 8- and 24-button models, except as noted</b>			
Account Code	TRANS/PGM + 80	Record Page MSG	TRANS/PGM + 65
Alarm Reset	565	Record User Greeting	TRANS/PGM + 61
Auth. Code Change	TRANS/PGM + 32	Register Station Name	TRANS/PGM + 74
Auth. Code Register	TRANS/PGM + 31	Ring Answer Mode	TRANS/PGM + 12
Background Music	TRANS/PGM + 73	Ring Type	TRANS/PGM + 11
Call Log	TRANS/PGM + 57	Set Customer MSG	TRANS/PGM + 52
Call Park	601-608	Set Pre-selected MSG	TRANS/PGM + 51
Camp-on	TRANS/PGM + 85	Set Wake-up Time	TRANS/PGM + 41
COS Down	TRANS/PGM + 21	Speakerphone/Headset	TRANS/PGM + 75
COS Restore	TRANS/PGM + 22	<b>Speed Dial</b>	
Direct Station Select	100-132	Station speed dial	SPEED + 000-099
Erase Page MSG	TRANS/PGM + 67	System speed dial	SPEED + 2000-2449
Erase User Greeting	TRANS/PGM + 66	Two way recording	TRANS/PGM + 54
Group Call Pick-up	TRANS/PGM + 71	Universal Night Answer	569
Headset Ring Mode	TRANS/PGM + 76	Wake-up Disable	TRANS/PGM + 42
Hunt Group	620-629	Walking COS	TRANS/PGM + 23
ICM Hold	TRANS/PGM + 83	<b>Button Assignment unique to 7208D</b>	
LCD Display Language	TRANS/PGM + 71	CALLBK button	TRANS + 92
Listen Station Number	TRANS/PGM + 63	CONF button	TRANS + 91
Listen Station Status	TRANS/PGM + 64	DND button	TRANS + 93
Listen Time & Date	TRANS/PGM + 62	FLASH button	TRANS + 94
LOOP button	TRANS/PGM + 84	MUTE button	TRANS + 95
MPB Version Display	TRANS/PGM + 72	SPEAKER button	TRANS + 96
<b>Outside Line Access</b>		REDIAL button	TRANS + 97
Group	801-808	H-T-P	TRANS/PGM + 12
Group access	9		
Individual Line Access	8801-8812		